


SAVEWO COOL FAN

説明書（日英中三語言掲頁式）

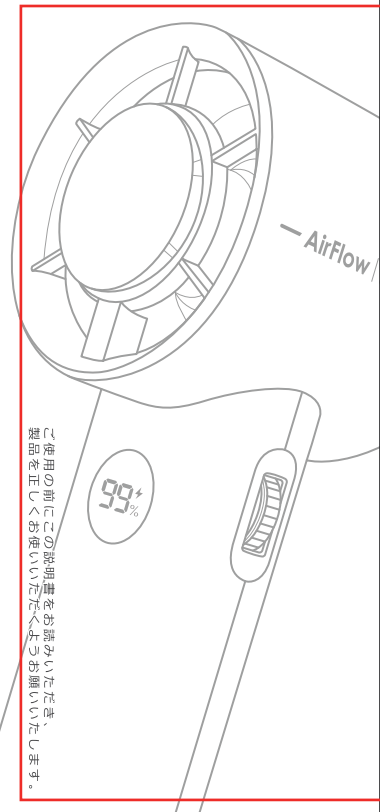


AirFlow

クールファン 取扱説明書


使い方

ファン機能	電源ボタンを短く押下	電源オン、 初期風速20段階スタート
	ホイールを回転する	01-100段階風速調節
	電源ボタンを短く押下	電源オフ
冷却機能	電源ボタンを長押下	冷却機能オン/オフ
	注意事項 ※冷却機能がオンの際は扇風機も同時に作動します。 ※冷却機能がオンの際は風速01-60段階が調節できます。	
LED表示	風速段階表示	01-100段階
	冷却表示	CO
	残量表示	01-100%
	残量低下表示	LO
	フル充電表示	100%

製品図

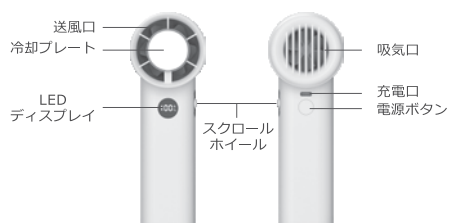

多機能紹介

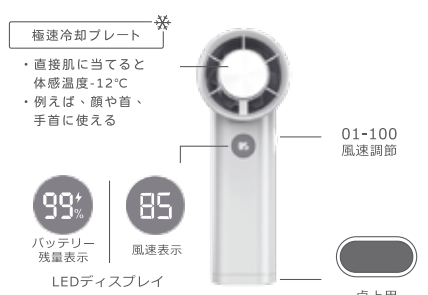

基本仕様


商品型番:	SAVEWO-AF-CF01
風速:	6m/s (Max.)
モーター回転数:	13000rpm
定格入力:	5V≒2A
定格出力:	≤10W
バッテリー容量:	5000mAh 3.7V (18.5Wh)
使用時間:	2.5-20hrs
充電時間:	2hrs
材質:	ABS、PC、SUS、金属
実施規格:	GB4706.1-2005、GB4706.27-2008
重量:	218g
商品サイズ:	60x61x167mm
原産国:	中国

標準セット内容

- ・クールファン本体 x1
- ・USB-C充電ケーブル x1
- ・取扱説明書 x1

注意事項

- ・吸気口や排気口に手や物を入れないでください。事故の恐れがあります。
- ・浴室など湿気の多い所で使わないでください。水に濡れると故障します。
- ・本製品を自分で分解、改造、修理しないでください。
- ・同梱USB-C充電ケーブルを使用して充電してください。
- ・指定以外の電圧は使用しないでください。
- ・火のそばで使ったり置いたりしないでください。火災の恐れがあります。
- ・本製品は涼しく乾燥した子供の手の届かない場所に保管してください。

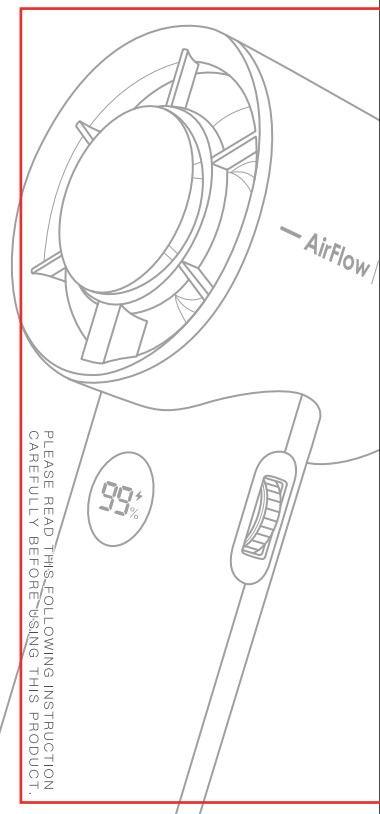


AirFLOW

COOL FAN User Manual


Instruction

Functions of the Fan	Short press the switch	Power on, initial fan speed at 20
	Scrolling the scroll wheel	Adjustable fan speeds 01-100
	Short press the switch	Power off
Cooling Functions	Long press the switch	Turn on/off cooling function
	Cautions: 1. When the cooling function is activate, the fan will be engage concurrently. 2. When the cooling function is activated, the fan speed can only be adjusted between 01-60.	
Functions of the display	Speed indication	01-100 Fan speeds
	Cooling functions	CO
	Battery level	01-100%
	Low battery	LO
	Fully charged	100%

Product diagram

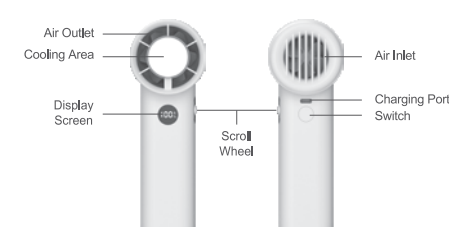

Multi-Functional Introduction

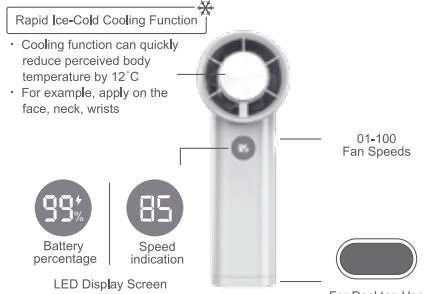

Parameters


Product Model:	SAVEWO-AF-CF01
Wind Speed:	6m/s (Max.)
Motor Speed:	13000rpm
Rated Input:	5V=2A
Rated Power:	≤10W
Battery Capacity:	5000mAh 3.7V (18.5Wh)
Usage Time:	2.5-20hrs
Charging Time:	2hrs
Material:	ABS、PC、SUS、PCBA
Standard:	GB4706.1-2005、GB4706.27-2008
Weight:	218g
Product Size:	60x61x167mm
Made In China	

Product contents

- Cool Fan x1
- USB-C Charging Cable x1
- Manual x1

Precautions

- Do not insert hands or foreign matters into the air inlet and outlet to avoid accidents or possible product damage.
- Do not use this product in humid environment (such as bathroom). Contact with water may cause product failure or damage.
- Do not disassemble, change or repair this product by yourself.
- Be sure to use the supplied USB-C cable for charging.
- Do not charge the product with a charger exceeding the specified Input Power.
- Do not put the product into or close to the fire source environment to avoid accidents and damage of product.
- Please store the product in a cool, dry place and keep it out of reach of children.

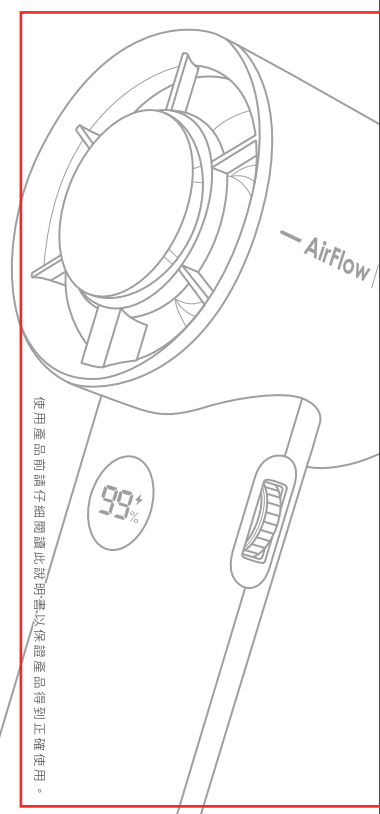


AirFlow

酷冰風扇 | COOL FAN 使用手冊

使用説明

風扇功能	短按電源鍵	開啟電源， 啟動初始風速為20
	轉動滾輪	調節風速01-100
	短按電源鍵	關閉電源
製冷功能	長按電源鍵	開啟/關閉製冷功能
	注意: 1. 當製冷功能啟動時，風扇將同步開啟。 2. 當製冷功能啟動時，可調節風速為01-60。	
LED 顯示螢幕	風速顯示	01-100
	製冷顯示	CO
	電量狀態	01-100%
	低電量狀態	LO
	滿電狀態	100%

產品示意圖

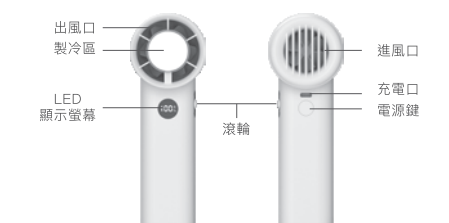

多功能介紹



基本參數

產品型號:	SAVEWO-AF-CF01
風速:	6m/s (Max.)
高轉速摩打:	13000rpm
額定輸入:	5V=2A
額定功率:	≤10W
電池容量:	5000mAh 3.7V (18.5Wh)
使用時間:	2.5-20hrs
充電時間:	2hrs
產品材質:	ABS、PC、SUS、電子元件
執行標準:	GB4706.1-2005、GB4706.27-2008
產品重量:	218g
產品尺寸:	60x61x167mm
產地:	中國

產品標配

- 酷冰風扇 x1
- USB-C充電線 x1
- 說明書 x1

注意事項

- 請勿將手或異物插入進風口、出風口，以免發生意外或可能會導致產品損壞。
- 請勿在潮濕環境(如浴室)使用本產品，與水接觸可能會導致產品故障或損壞。
- 請勿自行拆解、更改或修理本產品。
- 請務必使用隨附的USB-C充電線充電。
- 請勿使用超過規定的充電器為本產品充電。
- 請勿將產品投入或靠近火源環境，以免發生意外和可能會導致產品損壞。
- 請將產品存放在陰涼乾燥以及小孩無法接觸到的地方。

