



SAVEWO


www.savewo.com



Savewo



savewohk

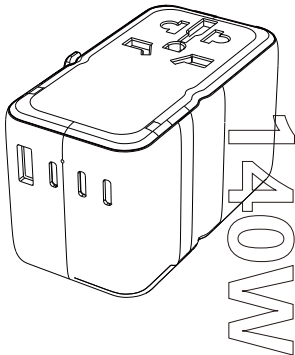

Savewo UniPlug

Universal Travel Adapter

4 Ports 140W PD 3.1 & QC 4.0+ GaN

4端口+通用旅行轉插 Model No. SAVEWO-UP140W

使用說明書 | 使用前請仔細閱讀本說明
User Manual | 請妥善保存，以備參考



警告

請按照說明書上的安全提示進行操作，
否則有可能導致起火、漏電或者其他傷害

更新日期: 20231229

1.產品規格

型號：SAVEWO-UP140W

輸入：100-250VAC,10A Max,2500W Max

單口輸出	C1/C2	:140W Max
	C3	:18W Max
	A	:18W Max
組合輸出	C1+C2	: 100W+35W Max
	C2+C3	: 100W+18W Max
	C1+USB-A	: 100W+18W Max
	C2+USB-A	: 100W+18W Max
	C3+USB-A	: 12W Max
	C1+C2+C3	: 65W+35W+18W Max
	C1+C2+USB-A	: 65W+35W+18W Max
	C1+C2+C3+USB-A	: 65W+35W+12W(C3+A) Max

保險絲：10A

最大總輸出：140W

工作溫度：0°C – 35°C

儲存溫度：-20°C – 70°C

過流保護、過壓保護、短路保護

內附：後備10A保險絲及收納袋

產品尺寸：92.7 x 55 x 53.7 mm

產品重量：270g

物料：阻燃PC

「備註：香港零售版本，因應香港法例，英規插頭已被封閉」

支援 PD3.1 , QC4+ , FCP , AFC , PPS , BC1-2 and more

Max.10A/Max.2500W110-250V~轉接器(AC-AC)不轉換電壓。

請勿與需要接地線的設備一起使用僅限室內使用




EFFICIENCY LEVEL **VI**

2. 產品結構

包含：

1. 4 USB插口+通用旅行插座
2. 備用10A保險絲
3. 使用說明書

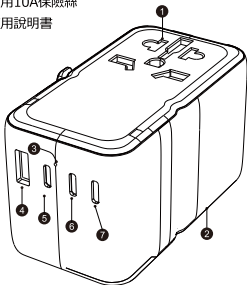


- | | |
|------------------------|--------------|
| ❶ 多插座 | ❹ USB-A 連接埠 |
| ❷ US / AU / UK / EU 插頭 | ❺ USB-C3 連接埠 |
| ❸ LED指示燈 | ❻ USB-C2 連接埠 |
| | ❼ USB-C1 連接埠 |

LED常亮	普通運作
LED關閉	1.可能過載，拔掉插頭一台設備並檢查狀態再次指示。 2.保險絲燒斷，請檢查保險絲。




3. 產品使用

內建多國插頭可供選擇，適合不同國家的所有插座安全功能
開關確保只有一個插頭通電。

只須滑動按鈕即可切換插頭



*由於地區限制，某些功能可能不能使用。



輕按按鈕（需要使用規格的插頭）並向下滑動

*使用 **US/JP** 插頭，請確保接觸片轉到平行位置。

*使用 **AUS** 插頭，請確保接觸片轉到插頭規格的位置。

恢復插頭：


按住「使用中」按鈕放開並繼續向上拉，直到插頭完全拉出頂部然後放開按鈕，按鈕將重設並鎖定插頭。

注意事項：

1. 請確保按鈕推出並縮回底部時按鈕已重位，如果按鈕未重位，則說明插頭尚未推到位，會影響正常使用。
2. 透過滑動旋鈕選擇一次只能使用一種插頭類型，其他插頭接腳自動鎖定。

4. 產品適用


適配器可接受 Type A, B, C, E, F, G, I, J, L, N 型插頭




請注意 不接受 Type D、H、K、M 和 O 型插頭



適配器可插入 A、B、C、D、E、F、G、H、I、J、K、L、M、N 和 O 型插座。



5. 更換 TE 保險絲

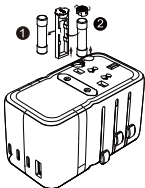

1. 取出 ❶
2. 取出 ❷，並將 ❷ 放入原來的位置 ❶，轉接器即可再次運作。
3. 您也可以更換新的保險絲。
標準：250Vac 10A
6.3*25.4mm

⚠ 注意事項

1. 更換新保險絲前，應將所有裝置拆下。
2. 請確認額定功率內的接入設備是否有水流出。
3. 請確認產品是否受潮、是否有水流出。

COMPATIBLE COUNTRIES

EU PLUG:

- A** Albania
Algeria
Angola
Argentina
Austria
Azores
- B** Balearic Islands
Bangladesh
Belgium
Bolivia
Bosnia
Brazil
Bulgaria
Burkina Faso
Burundi
- C** Cameroon
Canary Island
Cape Verde
Central African Republic
Channel Islands
Chile
Comoros
Congo
Croatia
Cote d'Ivoire
Cyprus
- D** Denmark
Djibouti
- E** Egypt
El Salvador
Equatorial Guinea
Eritrea
- F** Faeroe Islands
Finland
France
- G** Gabon
Germany
Gibraltar
Greece
Greenland
Guadeloupe
Guinea
Guinea-Bissau
- H** Hungary
- I** Iceland
India
Indonesia
Iran
Iraq
Israel
Italy
- K** Kazakhstan
Korea
Kuwait
- L** Laos
Lebanon
Lithuania
Luxembourg
- M** Macedonia
Madagascar
Madeira
Mali
Martinique
Mauritania
Mauritius
Monaco
Morocco
Mozambique
Myanmar
- N** Nepal
Netherlands
Niger
Norway
- O** Oman
- P** Pakistan
Paraguay
Peru
Philippines
Poland
Portugal
Romania
Russia
Rwanda
- S** Senegal
Somalia
Spain
Sudan
Suriname
Sweden
Switzerland
Syria
- T** Thailand
Togo
Tunisia
Turkey
- U** Uruguay
- V** Vietnam
- Z** Zambia

COMPATIBLE COUNTRIES

AUS PLUG:

A American Samoa
Argentina
Australia
C China
E El Salvador
F Fiji
G Guatemala
K Kiribati
N Nauru
New Zealand
Panama
Papua New Guinea
S St. Vincent
T Tajikistan
Tonga
U Uruguay

USA PLUG:

A American Samoa
Anguilla
Antilles
Aruba
B Bahamas
Bangladesh
Barbados
Bermuda
Bolivia
Brazil
C Cambodia
Canada
Cayman Island
China
Colombia
Costa Rica
Cuba
E Ecuador
El Salvador
G Guam
Guatemala
Guyana
H Haiti
Honduras

J Japan
Jamaica
L Laos
Lebanon
Liberia
M Maldives
Mexico
Micronesia
Montserrat
N Netherlands
Nicaragua
Niger
O Okinawa
P Panama
Peru
Philippines
Puerto Rico
S St. Vincent
Saudi Arabia
T Tahiti
Taiwan
Thailand
U United States
V Venezuela
Vietnam
Virgin Islands
(US&British)
Y Yemen

COMPATIBLE COUNTRIES

UK PLUG:

B Bahrain
Bangladesh
Belize
Botswana
Brunei
C Cameroon
Channel Islands
Cyprus
D Dominica
E El Salvador
G Gambia
Ghana
Gibraltar
Grenada
Guatemala
Guyana
H Hong Kong
I Iraq
Ireland
Isle of Man
J Jordan
K Kuwait
L Lebanon

M Macau
Malawi
Malaysia
Maldives
Malta
Mauritius
Myanmar
N Nigeria
Q Oman
Qatar
S St. Lucia
St. Vincent
Saudi Arabia
Seychelles
Sierra Leone
Singapore
T Tanzania
U Uganda
United Arab Emirates
United Kingdom
V Vietnam
Y Yemen
Z Zambia
Zimbabwe



6. ⚠ 重要安全說明

使用本產品時，務必要注意

- 避免陽光直接照射。
- 請於通風良好的地方使用。
- 如出現過熱，請停止使用。
- 將產品存放在陰涼乾燥處。請勿將產品存放在高溫或潮濕的環境中。
- 請勿將水或其它液體流入本產品介面內部，導致本產品損壞。
- 請勿使用有害化學品或清潔劑清潔本產品。
- 請勿拆解、刺穿、撞擊或改裝本產品。使用不當、摔落或過度用力可能會導致產品短路或損壞。
- 此產品不是玩具。請將其遠離兒童。不要讓兒童使用或玩耍，以免發生意外。
- 使用或充電期間避免長時間運行高耗能的程式。
- 使用不當可能會導致、過熱，甚至起火或其它危險。

⚠ 警告

- 使用適配器前，請仔細閱讀本說明！本產品不轉換電壓（AC-AC）為了避免可能損壞您的設備或其他安全隱患，請在使用此適配器之前確保您打算使用的電源插座具有正確的電壓來運行您的設備。
- 僅限室內使用。
- 不使用時請務必從插座拔下
- 誤用可能導致觸電。
- USB線長度應小於3m。旅行轉接器僅供臨時使用，不得永久使用

處理廢棄電子產品

- 請勿將電子產品當成家庭廢棄物丟棄；
- 請依當地的法例規定處理廢棄的電子產品；
- 請積極參與電子產品回收計劃。

7. 保修條款


⚠ 注意事項

- 產品保修服務只適用於救世官網或官方授權經銷商出售之產品。
- 維修產品時客戶需出示由 Savewo Distribution Limited 或官方經銷商所發出之正式發票予技術員查閱，如客戶未能出示有效文件，則須繳付所需之維修費用。（詳情請參閱條款及細則。）
- 如有任何爭議，Savewo Distribution Limited 會保留最終決定權。

條款及細則

Savewo Distribution Limited(下稱“本公司”)將提供十二個月有限保修服務（由發票上的日期起計）。超過此期間者，產品保修服務將收取維修費用。

1. 對於任何因產品不適當地使用而導致產品之故障、損壞、停頓，或引致任何人士和財產的直接或間接損失及破壞，本公司概不負責。
2. 使用保修服務時，客戶須自行將產品送往客戶服務中心或指定地點，並於同一地點取回。
3. 在正常使用情況下，本公司將在保養期內為故障之產品提供免費保修服務。（產品表面、機殼、損耗性零件、配件及消耗品除外。）
4. 下列項目並不包括於保修範圍內，客戶須另付所需的服務費用。
 - (a) 曾被非授權人士進行改裝、更改或修理的產品。
 - (b) 曾經被不適當或疏忽使用、用後疏於保養、不正常供電或電壓不正常意外、天災或因昆蟲、外物、液體入侵、腐蝕、正常使用損耗或外來因素而造成損壞的產品。
 - (c) 未遵守使用說明書列明的方法使用，造成產品損傷。
5. 所有資料如有任何更改，恕不另行通知。如有任何爭議，本公司保留最終決定權。

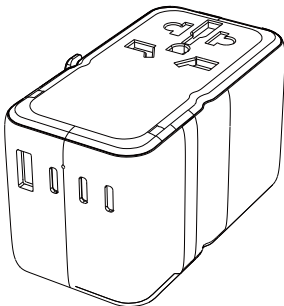

為保證您能充分了解並正確使用本產品，
請您仔細閱讀說明書。建議妥善保存，以便需要時
查閱。

*產品更新有機會造成說明書內容有差異，請以實物為準。

客戶服務及售後支援專線

+852 5503 2370

救世客戶服務中心

香港荃灣德士古道266-270號 金泰線廠1樓

1/F, 266-270 Texaco Road, Tsuen Wan, N.T., Hong Kong

www.savewo.com



Savewo



savewohk




SAVEWO



Savewo



savewohk

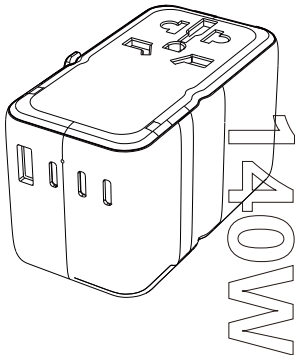

Savewo UniPlug

Universal Travel Adapter

4 Ports 140W PD 3.1 & QC 4.0+ GaN

Type-C x 3 + USB-A Model No. SAVEWO-UP140W

User Manual | Please read this instruction completely and keep it properly



Warning

Please follow the safety instructions contained in this user manual; otherwise, it may result in fire, leakage, or other damages.

1.Product Specification

Model : SAVEWO-UP140W

AC Input : 100-250VAC,10A Max,2500W Max

Single port output	C1/C2	:140W Max
	C3	:18W Max
	A	:18W Max
Combined port output	C1+C2	: 100W+35W Max
	C2+C3	: 100W+18W Max
	C1+USB-A	: 100W+18W Max
	C2+USB-A	: 100W+18W Max
	C3+USB-A	: 12W Max
	C1+C2+C3	: 65W+35W+18W Max
	C1+C2+USB-A	: 65W+35W+18W Max
	C1+C2+C3+USB-A	: 65W+35W+12W(C3+A) Max

Fuse : 10A

Max Total Output : 140W

Operating Temperature : 0°C – 35°C

Storage Temperature : -20°C – 70°C

Over-current, over-voltage, and short circuit protection

Includes : Spare 10A fuse and storage pouch

Dimensions : 92.7 x 55 x 53.7 mm

Weight : 270g

Material : Flame retardant PC

"Note: Retail Hong Kong version -

UK plug sealed to comply with local regulations"

Support PD3.1 , QC4+ , FCP , AFC , PPS , BC1-2 and more

Max.10A/Max.2500W AC-AC Converter 110-250V~ does not convert voltage.Do not use with equipment requiring an earth/ground connection.
For indoor use only.




EFFICIENCY LEVEL **V1**

2. Product Structure

Includes:

- 1. 4 USB ports + universal travel adapter
- 2. Spare 10A fuse
- 2. User manual

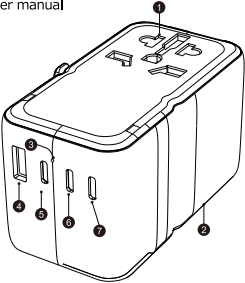


- | | |
|---------------------------|----------------|
| 1 Multi-outlet | 4 USB-A ports |
| 2 US / AU / UK / EU plugs | 5 USB-C3 ports |
| 3 LED indicator | 6 USB-C2 ports |
| | 7 USB-C1 ports |

LED On	Normal operation
LED Off	1.Possible overload, unplug one device and check status light again. 2.Fuse blown, check fuse.




3.Product Usage

Built-in plugs for worldwide use and safety. Slider button ensures only one plug active at a time.

Simply slide button to switch plugs.



*Some features may not be usable due to regional restrictions.



Press button lightly (need compliant plug) and slide down.

*For **US/JP** plug, ensure prongs are parallel.

*For **AUS** plug, ensure prongs match plug type.

To Reset Plug:


Hold "In Use" button, release, and continue pulling up until plug fully extended, then release button. Button will reset and lock plug.

Notes:

1. Ensure button pops back out when sliding up/down, if not, plug is not fully engaged which will affect usage.
2. Slider button selects one plug type at a time, other plug pins automatically lock.

4.Product Compatibility

Adapter accepts plug Type A, B, C, E, F, G, I, J, L, N




Type A Type B Type C Type E Type F Type G Type I Type J Type L Type N

Does NOT accept plug Type D, H, K, M, O



Type D Type H Type K Type M Type O

Adapter can be plugged into socket types
A, B, C, D, E, F, G, H, I, J, K, L, M, N, O.




Type A Type B Type C Type D Type E Type F Type G Type H



Type I Type J Type K Type L Type M Type N Type O

5.Replacing Fuse

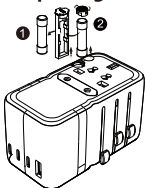

1. Remove ❶
2. Insert ❷ back to original position ❶, adapter will work again.
3. Can also replace with new fuse. Spec:250Vac
10A 6.3*25.4mm

⚠ CAUTIONS

1. Remove all devices before replacing fuse.
2. Ensure connected devices are within rated power.
3. Ensure product is not wet and no water is leaking.

COMPATIBLE COUNTRIES

EU PLUG:

A Albania

Algeria
Angola
Argentina
Austria
Azores

B Balearic Islands

Bangladesh
Belgium
Bolivia
Bosnia
Brazil
Bulgaria
Burkina Faso
Burundi

C Cameroon

Canary Island
Cape Verde
Central African Republic
Channel Islands
Chile
Comoros
Congo
Croatia
Cote d'Ivoire
Cyprus

D Denmark

Djibouti

E Egypt

El Salvador
Equatorial Guinea
Eritrea

F Faeroe Islands

Finland
France

G Gabon

Germany
Gibraltar
Greece
Greenland
Guadeloupe
Guinea
Guinea-Bissau

H Hungary

I Iceland

India
Indonesia
Iran

Iraq

Israel

Italy

K Kazakhstan

Korea
Kuwait

L Laos

Lebanon
Lithuania
Luxembourg

M Macedonia

Madagascar
Madeira
Mali

Martinique

Mauritania

Mauritius

Monaco

Morocco

Mozambique

Myanmar

N Nepal

Netherlands

Niger

Norway

O Oman

P Pakistan

Paraguay

Peru

Philippines

Poland

Portugal

Romania

Russia

Rwanda

Senegal

S Somalia

Spain

Sudan

Suriname

Sweden

Switzerland

Syria

Thailand

T Togo

Tunisia

Turkey

U Uruguay

V Vietnam

Z Zambia

COMPATIBLE COUNTRIES

AUS PLUG:

A American Samoa
Argentina
Australia
C China
E El Salvador
F Fiji
G Guatemala
K Kiribati
N Nauru
New Zealand
Panama
Papua New Guinea
S St. Vincent
T Tajikistan
Tonga
U Uruguay

USA PLUG:

A American Samoa
Anguilla
Antilles
Aruba
B Bahamas
Bangladesh
Barbados
Bermuda
Bolivia
Brazil
C Cambodia
Canada
Cayman Island
China
Colombia
Costa Rica
Cuba
E Ecuador
El Salvador
G Guam
Guatemala
Guyana
H Haiti
Honduras

J Japan
Jamaica
L Laos
Lebanon
Liberia
M Maldives
Mexico
Micronesia
Montserrat
N Netherlands
Nicaragua
Niger
O Okinawa
P Panama
Peru
Philippines
Puerto Rico
S St. Vincent
Saudi Arabia
T Tahiti
Taiwan
Thailand
U United States
V Venezuela
Vietnam
Virgin Islands
(US&British)
Y Yemen

COMPATIBLE COUNTRIES

UK PLUG:

- | | |
|----------------------|----------------------|
| B Bahrain | M Macau |
| Bangladesh | Malawi |
| Belize | Malaysia |
| Botswana | Maldives |
| Brunei | Malta |
| | Mauritius |
| | Myanmar |
| C Cameroon | N Nigeria |
| Channel Islands | Q Oman |
| Cyprus | Qatar |
| D Dominica | S St. Lucia |
| E El Salvador | St. Vincent |
| G Gambia | Saudi Arabia |
| Ghana | Seychelles |
| Gibraltar | Sierra Leone |
| Grenada | Singapore |
| Guatemala | T Tanzania |
| Guyana | U Uganda |
| H Hong Kong | United Arab Emirates |
| I Iraq | United Kingdom |
| Ireland | |
| Isle of Man | V Vietnam |
| J Jordan | Y Yemen |
| K Kuwait | Z Zambia |
| L Lebanon | Zimbabwe |



6. ⚠ Important Safety Instructions

When using this product, be sure to:

- Avoid direct sunlight.
- Use in well-ventilated area.
- Stop use if overheating occurs.
- Store in cool dry place, avoid high temps or damp environments.
Prevent water or liquids from entering product to avoid damage.
- Do not use harsh chemicals or cleaners on product.
- Do not disassemble, puncture, impact, or modify product.
- Misuse, drops, or excessive force can cause short circuit or damage.
- This product is not a toy. Keep away from children. Do not let children play with or operate to prevent accidents.
- Avoid prolonged use of high drain apps during use or charging.
- Misuse can cause overheating, fire or other dangers.

⚠ WARNING

- Read instructions fully before using adapter! This product does NOT convert voltage (AC-AC). To avoid potential damage to your devices or other safety hazards, ensure the power outlet you intend to use with this adapter has the proper voltage to operate your device before using.

Indoor use only.

- Unplug when not in use.
- To prevent electric shock if misused.
- USB cable length should be less than 3m. Travel adapter is for temporary use only, not permanent installation.

Disposal of e-waste

- Do not dispose of electronics as household waste.
- Follow local regulations for disposal of electronic waste.
- Actively participate in e-waste recycling programs.

7. Warranty Terms & Conditions


Important notes:

- The Warranty Service is only applicable to products purchased on the official website of Savewo or through authorised dealers.
- Customers are required to present the official purchase invoice issued by Savewo Distribution Limited or authorised dealers to the technician for verification when service is required. Otherwise, the service will be subject to charges.
(Please refer to Terms and Conditions for details).
- In case of any dispute, the decision of Savewo Distribution Limited shall be final.

Terms and Conditions

Savewo Distribution Limited ("The Company") provides a warranty period of 12 months from the date of purchase. Repair and maintenance services beyond the warranty period will be subject to charges.

1. "The Company" shall not be liable for any direct or indirect loss or damage to any person or property, howsoever caused arising from improper use, or any stoppage, breakdown or failure of the product.
2. Customers are responsible to deliver the product to our service centres or designated stores, and to pick up the repaired product from the same location.
3. For any defect which in our judgment is caused under normal use, "The Company" will repair or replace the defective parts, free of charge within the warranty period (excluding any surface, cabinet, consumptive parts, accessories and consumable).
4. Warranty service does not cover the following items. Additional charges shall be levied if services are required.
 - (a) The product has been modified, tempered with, altered or repaired in any way by unauthorised persons.
 - (b) The product has been damaged through misuse, negligence, neglect of care after use, power interruption or abnormal voltage input, accident, natural calamities, or due to ingress of insects, foreign matters or liquid, corrosion, normal wear and tear or external factors.
 - (c) The product has been damaged due to use contrary to the instructions in this manual.
5. All terms stated are subject to change without notice. In case of any dispute, the decision of Savewo Distribution Limited shall be final.

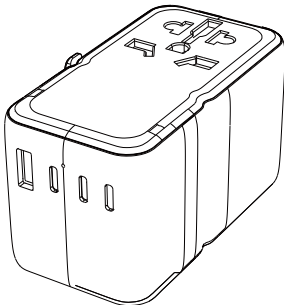

In order to ensure that you can fully understand and use this product correctly, please read this manual carefully, and it is recommended to keep this manual properly for reference when needed.

*Differences may arise due to product updates. Please refer to the actual product for accurate information.

Customer Service and After-Sales Support Hotline
+852 5503 2370

SAVEWO LIMITED Customer Service Center
1/F, 266-270 Texaco Road, Tsuen Wan, N.T., Hong Kong

www.savewo.com  Savewo  savewohk




SAVEWO



Savewo



savewohk

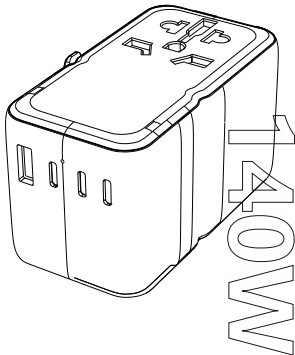

Savewo UniPlug

Universal Travel Adapter

4 Ports 140W PD 3.1 & QC 4.0+ GaN

ユニバーサルトラベルアダプター Model No. SAVEWO-UP140W

取扱説明書 | ご使用前に必ずこの説明書をお読みください
User Manual | 保管用に大切に保管してください



警告

本取扱説明書の安全上の指示に従って操作してください。
そうしないと、火災、感電、その他の傷害につながるおそれがあります。

1.製品仕様書

モデル：SAVEWO-UP140W
AC入力：100-250VAC,10A Max,2500W Max

シングル ポート出力	C1/C2	:140W Max
	C3	:18W Max
	A	:18W Max
組み合わせ ポート出力	C1+C2	: 100W+35W Max
	C2+C3	: 100W+18W Max
	C1+USB-A	: 100W+18W Max
	C2+USB-A	: 100W+18W Max
	C3+USB-A	: 12W Max
	C1+C2+C3	: 65W+35W+18W Max
	C1+C2+USB-A	: 65W+35W+18W Max
	C1+C2+C3+USB-A	: 65W+35W+12W(C3+A) Max

ヒューズ:10A
最大出力:140W
動作環境温度:0℃ - 35℃
保管温度:-20℃ - 70℃
過電流、過電圧、短絡保護機能
付属品:予備の10Aヒューズ、収納ポーチ
サイズ:92.7 x 55 x 53.7 mm
重量:270g

材質:難燃性PC

「注意:香港向け小売り版- 現地規制に準拠するためUKプラグ
が封入」

PD3.1、QC4+、FCP、AFC、PPS、BC1-2などに対応

最大10A/最大2500W AC-ACコンバーター110-250V~は電圧変換を
行いません。アース接続が必要な機器では使用しないでください。
屋内専用です。




EFFICIENCY LEVEL 

2.製品構造

セット内容：

- 1. 4x USBポートと国際コンセント
- 2. 予備の10Aヒューズ
- 3. 取扱説明書

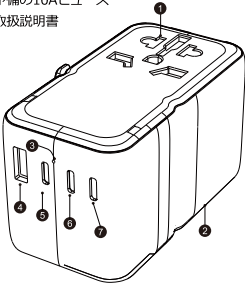



- ① マルチコンセント
- ② US / AU / UK / EU プラグ
- ③ LEDインジケータ
- ④ USB-A ポート
- ⑤ USB-C3 ポート
- ⑥ USB-C2 ポート
- ⑦ USB-C1 ポート

LED点灯	通常の操作
LED消灯	1.過負荷の可能性がある場合、 1台の機器のプラグを抜き、状態を 確認してから再接続してください。 2.ヒューズが切れた場合は、 ヒューズを確認してください。




3.製品の使い方

複数の国のプラグを内蔵しており、さまざまな国のコンセントに対応できます。安全スイッチにより、1つのプラグのみが通電します。

スライドボタンを動かすだけで簡単にプラグを切り替えます。



*地域によっては、一部機能をご利用いただけない場合があります。



ボタンを軽く押し(規格のプラグが必要)、下にスライド

※ **US/JP** プラグを使用する際は、接点が平行になっていることを確認してください。

※ **AUS** プラグを使用する際は、接点がプラグの規格の位置にあることを確認してください。

プラグを元に戻す:

「In Use」ボタンを押しながら上にスライドし、プラグが完全に出てきたらボタンを離す。ボタンがリセットされ、プラグが固定されます。

注意事項:

1. ボタンが押し出してから元の位置に戻るときに、必ずボタンがリセットされていることを確認してください。リセットされていない場合、プラグが完全にセットされておらず、正常に動作しない可能性があります。
2. スライドボタンで1つのプラグタイプのみ選択できます。使用していないプラグのピンは自動的にロックされます。

4. 製品の適用

以下のプラグタイプに対応：A、B、C、E、F、G、I、J、L、N




Type A Type B Type C Type E Type F Type G Type I Type J Type L Type N

以下のプラグタイプは非対応：D、H、K、M、O



Type D Type H Type K Type M Type O

以下のコンセントに挿せます：
A、B、C、D、E、F、G、H、I、J、K、L、M、N、O




Type A Type B Type C Type D Type E Type F Type G Type H



Type I Type J Type K Type L Type M Type N Type O

5. ヒューズの交換

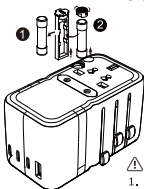

1. ヒューズ ① を取り外す。
2. ② を取り外し、① の元の位置に戻す。アダプターは再び動作できるようになります。
3. 新しいヒューズに交換することも可能です。規格：
250Vac 10A 6.3*25.4mm

⚠ 注意

1. 新しいヒューズに交換する前に、すべての機器を取り外してください。
2. 接続機器の定格出力内であることを確認してください。
3. 製品が湿っていないか、水漏れがないか確認してください。

COMPATIBLE COUNTRIES

EU PLUG:

A Albania

Algeria
Angola
Argentina
Austria
Azores

B Balearic Islands

Bangladesh
Belgium
Bolivia
Bosnia
Brazil
Bulgaria
Burkina Faso
Burundi

C Cameroon

Canary Island
Cape Verde
Central African Republic
Channel Islands
Chile
Comoros
Congo
Croatia
Cote d'Ivoire
Cyprus

D Denmark

Djibouti

E Egypt

El Salvador
Equatorial Guinea
Eritrea

F Faeroe Islands

Finland
France

G Gabon

Germany
Gibraltar
Greece
Greenland
Guadeloupe
Guinea
Guinea-Bissau

H Hungary

I Iceland

India
Indonesia
Iran

Iraq

Israel

Italy

K Kazakhstan

Korea
Kuwait

L Laos

Lebanon
Lithuania
Luxembourg

M Macedonia

Madagascar
Madeira
Mali

Martinique

Mauritania

Mauritius

Monaco

Morocco

Mozambique

Myanmar

N Nepal

Netherlands

Niger

Norway

O Oman

P Pakistan

Paraguay

Peru

Philippines

Poland

Portugal

Romania

Russia

Rwanda

Senegal

S Somalia

Spain

Sudan

Suriname

Sweden

Switzerland

Syria

Thailand

T Togo

Tunisia

Turkey

U Uruguay

V Vietnam

Z Zambia

COMPATIBLE COUNTRIES

AUS PLUG:

A American Samoa
Argentina
Australia
C China
E El Salvador
F Fiji
G Guatemala
K Kiribati
N Nauru
New Zealand
Panama
Papua New Guinea
S St. Vincent
T Tajikistan
Tonga
U Uruguay

USA PLUG:

A American Samoa
Anguilla
Antilles
Aruba
B Bahamas
Bangladesh
Barbados
Bermuda
Bolivia
Brazil
C Cambodia
Canada
Cayman Island
China
Colombia
Costa Rica
Cuba
E Ecuador
El Salvador
G Guam
Guatemala
Guyana
H Haiti
Honduras

J Japan
Jamaica
L Laos
Lebanon
Liberia
M Maldives
Mexico
Micronesia
Montserrat
N Netherlands
Nicaragua
Niger
O Okinawa
P Panama
Peru
Philippines
Puerto Rico
S St. Vincent
Saudi Arabia
T Tahiti
Taiwan
Thailand
U United States
V Venezuela
Vietnam
Virgin Islands
(US&British)
Y Yemen

COMPATIBLE COUNTRIES

UK PLUG:

B	Bahrain	M	Macau
	Bangladesh		Malawi
	Belize		Malaysia
	Botswana		Maldives
	Brunei		Malta
C	Cameroon		Mauritius
	Channel Islands	N	Myanmar
	Cyprus	N	Nigeria
D	Dominica	Q	Qman
E	El Salvador		Qatar
G	Gambia	S	St. Lucia
	Ghana		St. Vincent
	Gibraltar		Saudi Arabia
	Grenada		Seychelles
	Guatemala		Sierra Leone
	Guyana		Singapore
H	Hong Kong	T	Tanzania
I	Iraq	U	Uganda
	Ireland		United Arab Emirates
	Isle of Man		United Kingdom
J	Jordan	V	Vietnam
K	Kuwait	Y	Yemen
L	Lebanon	Z	Zambia
			Zimbabwe



6. ⚠ 重要な安全上の注意

本製品の使用時は、必ず以下の点にご注意ください。

- 直射日光を避けてください。
- 通気性の良い場所で使用してください。
- 過熱した場合は使用を停止してください。
- 涼しく乾燥した場所に保管してください。高温多湿な環境に置かないでください。
- 本製品の内部に水やその他の液体をこぼさないでください。故障の原因となります。
- 有害な化学薬品や洗剤で清掃しないでください。
- 分解、刺し穿ち、衝撃を与えたり改造しないでください。誤用、落下、過度の力が短絡や破損の原因となります。
- お子様の手の届かない場所に保管してください。おもちゃとして使用させないでください。事故防止のため、お子様が使用、遊びに使うことは避けてください。
- 使用中や充電中は、長時間の高負荷プログラムの実行を避けてください。
- 誤った使い方は、過熱や火災、その他の危険を招くおそれがあります。

⚠ 警告

- アダプターを使用する前に、この説明書をよくお読みください。この製品は電圧変換(AC-AC)を行いません。機器の損傷や安全上のリスクを避けるため、使用前にコンセントの電圧が機器の定格に適していることを確認してください。
- 屋内専用です。
- 使用しないときはコンセントから抜いてください。
- 誤った使い方は感電の原因となります。
- USBケーブルの長さは3m以下にしてください。本製品は一時的な使用のみを目的としています。絶対に永続的な使用はしないでください。

廃棄について

- 電子機器は家庭ごみとして廃棄しないでください。
- 地域の法律に従って廃棄してください。
- 電子機器のリサイクルにご協力ください。

9.修理規定


⚠ 注意事項

- 製品の修理サービスは、Savewo公式サイトまたは認定販売店で購入した製品に対してのみ適用されます。
- 修理の際、Savewo Distribution Limitedまたは認定販売店が発行した正式な領収書を技術者に提示する必要があります。有効な書類が提示できない場合、修理費用を支払う必要があります。(詳細は利用規約を参照してください。)
- 紛争が発生した場合、Savewo Distribution Limitedの最終的な判断が優先されます。

利用規約

Savewo Distribution Limited（以下、“本社”と称す）は、発注書の日付から12ヶ月間の限定保証サービスを提供します。この期間を超えた場合、製品の保証サービスには修理費用

1. 本社は製品の不適切な使用により生じた故障、損傷、停止、または他者や財産に直接または間接的に生じた損失や損害について、一切の責任を負いません。
2. 保証サービスを利用する際、お客様は製品を自身で顧客サービスセンターまたは指定場所に持ち込み、同じ場所で受け取る必要があります。
3. 通常の使用条件下で、本社は保証期間内に故障した製品に対して無償の保修サービスを提供します。（表面、筐体、消耗品、アクセサリ、消耗品を除く）
4. 保証範囲に含まれない以下の項目については、お客様が別途必要なサービス料金を支払う必要があります。
 - (a) 非承認の個人によって改造、変更、または修理が行われた製品。
 - (b) 不適切な使用、保守不足、異常な電力供給または電圧、事故、自然災害、昆虫や異物、液体の侵入、腐食、通常の使用による摩耗または外部要因により生じた損傷があった製品。
 - (c) 製品の使用説明書に記載されている方法に従わないことにより生じた製品の損傷。
5. 通常の使用条件下で、本社は保証期間内に故障した製品に対して無償の保修サービスを提供します。（表面、筐体、消耗品、アクセサリ、消耗品を除く）

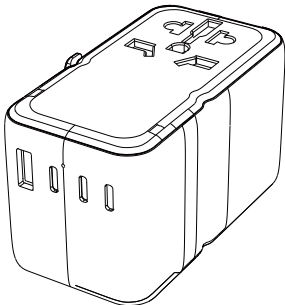

本製品を正しく安全にお使いいただくために、この説明書を必ずお読みください。
説明書は大切に保管し、必要に応じてご確認ください。

※製品の改良により、実際の製品と説明書の内容が異なる場合がございます。実物を優先してください。

カスタマーサポート

Customers Service and After-Sales Support Hotline
+81 03-6202-7180

Betsutenjin Japan株式会社

〒103-0023

東京都中央区日本橋本町336ワカ末ビル7階

www.savewo.com



Savewo



savewohk



Type A



Type B



Type C



Type D



Type E



Type F



Type G



Type H



Type I



Type J



Type K



Type L



Type M



Type N



Type O

5.更換 TE 保險絲

—————



Type A



Type B



Type C



Type D



Type E



Type F



Type G



Type H



Type I



Type J



Type K



Type L



Type M



Type N



Type O

5.更換 TE 保險絲

—————